ECOSYS PA6000x / ECOSYS PA5500x
ECOSYS PA5000x / ECOSYS PA4500x

Setup Guide

3VC0T5611001

Installation Environment


Kyocera Recommends selecting the Location for the printer as follows:

1. Room Temperature range: 50 to 90.5°F
2. Humidity Level: 10 to 80%
3. Power: 120 V Specification Model:
   A dedicated 120VAC 60Hz 15A outlet
   230 V Specification Model:
   A dedicated 200-240VAC 50/60Hz 15A outlet

Avoid the following locations when selecting a site for the machine.
Adverse environmental conditions may affect the image quality.

+ Avoid locations near a window or with exposure to direct sunlight.
+ Avoid locations with vibrations.
+ Avoid locations with rapid temperature fluctuations.
+ Avoid locations with direct exposure to hot or cold air.
+ Avoid poorly ventilated locations.

Recommended Installation Space

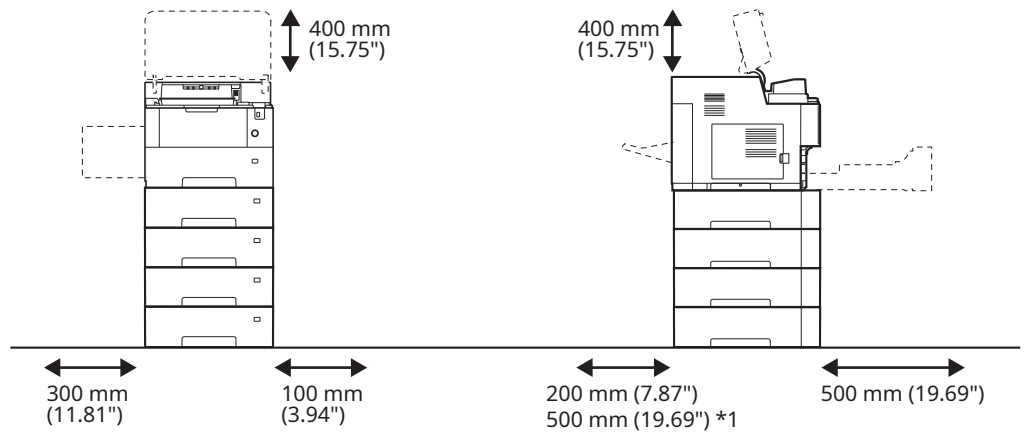



*1: The value when an optional rear tray (PT-320) is installed to the the ECOSYS PA5000x, ECOSYS PA5500x and ECOSYS PA6000.

Step 1 Setting up the Printer


1 Open the Box. Remove the machine carefully from the box grasping both sides.


2 Lift the main unit from the handles by cardboard handles.

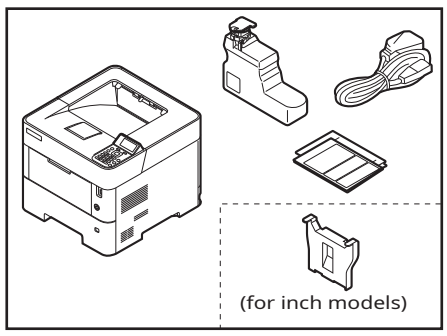


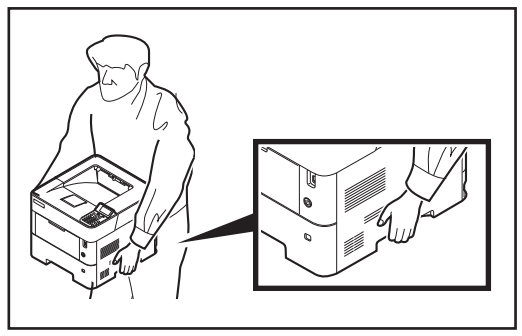


3 Open the top cover. After Removing the packing material, shake and install the toner container. Close the top cover.

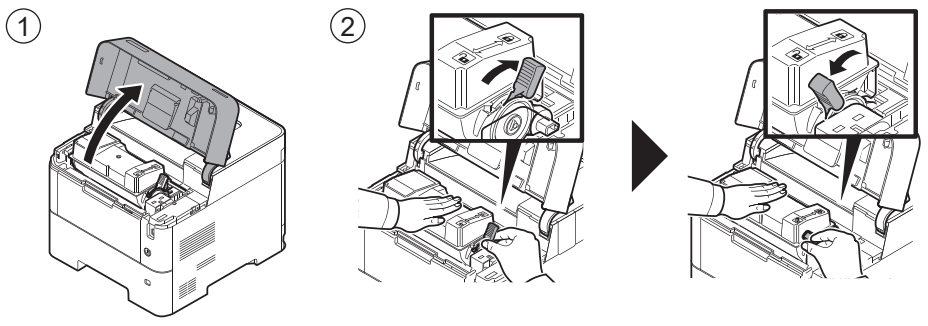


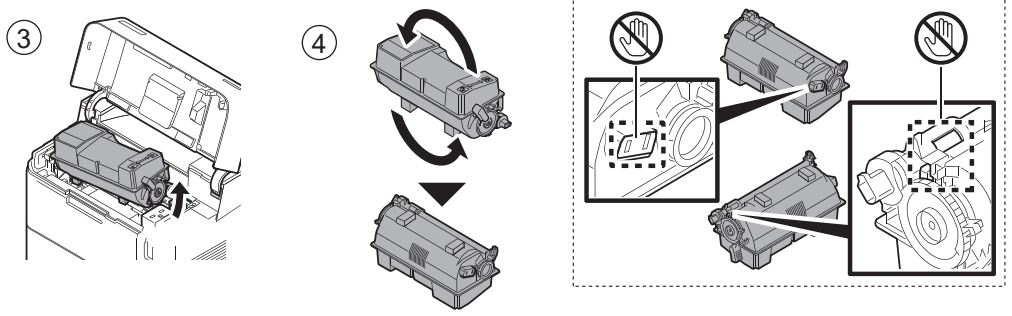

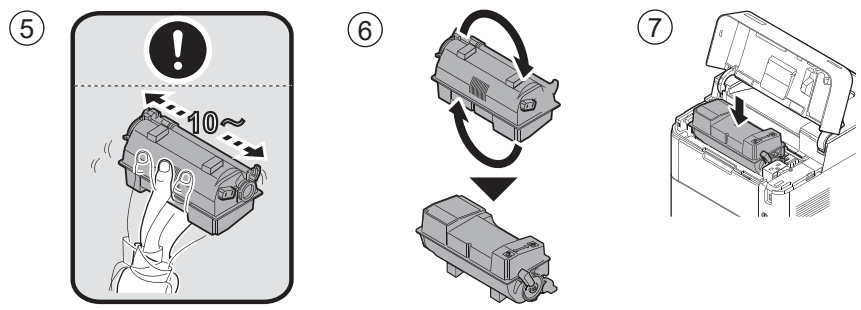

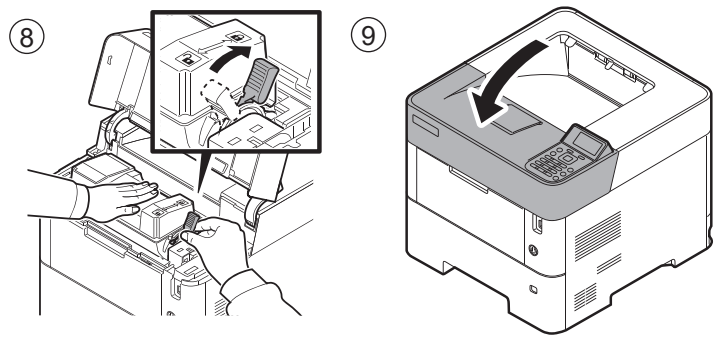


Step 2 Install Waste toner box

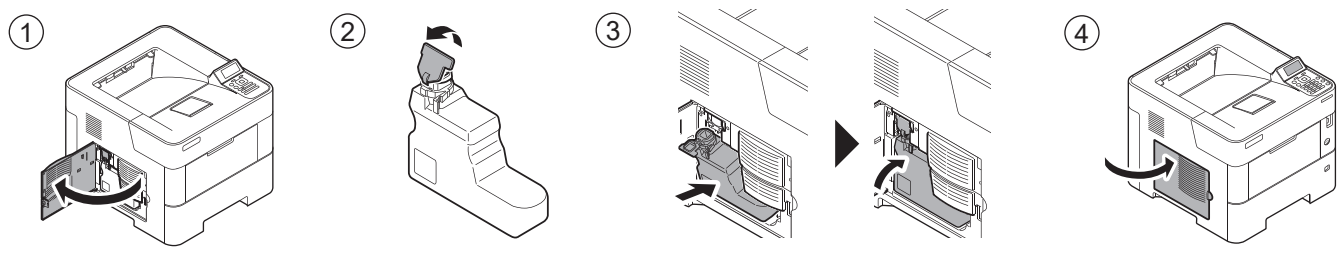


Step 3 Loading Paper


1 Pull the Cassette 1 completely out of the machine.

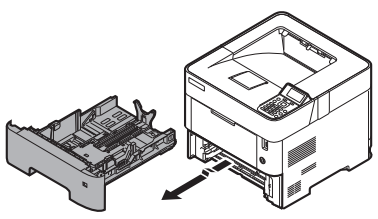


2 Adjust the paper length and width guide to the paper size required.

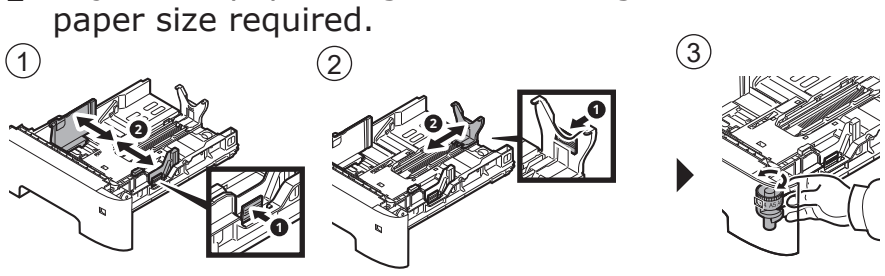


3 Fan the paper, then tap it on a level surface.

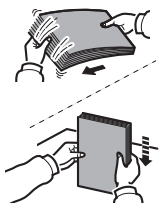

4 Load paper.

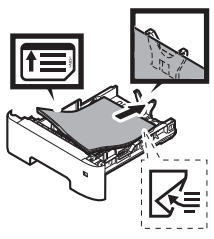

5 Gently push the Cassette 1 back in.

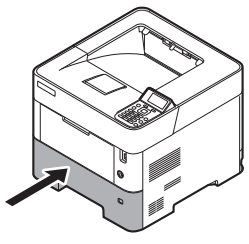


+ Set print side face-up.
+ No bent or folder edges in the paper. Such paper may cause paper jams.
+ Set the quantity of the paper less than the maximum paper indication on the side or the cassette.
+ If the paper is loaded without adj usting the paper length guide and the pa per width guides, skewed paper feeding, and a paper jam will occur.


2022.5 3VC0T5611001

Step 4 Powering on the Printer

1 Connect the power cord to the rear of the machine and the other end to the power outlet.

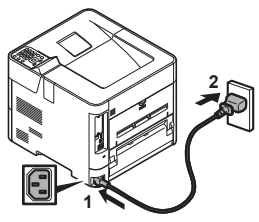


2 Turn the power switch ON at the front of the printer.

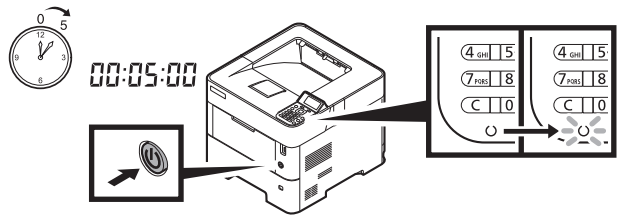


Step 5 Default Settings of the Machine

1 Press [◀] [▶] key to select default language > [**OK**] key.

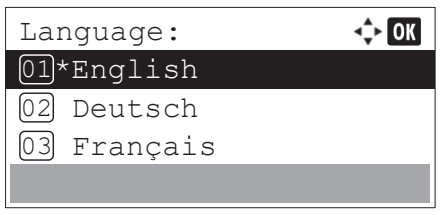


2 Select [Yes].

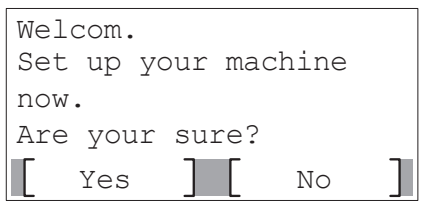


The setup screen appears.

3 Select [Change] when you change the time zone, date and time. Follow the instruc tions on the screen. If not, select [Skip].

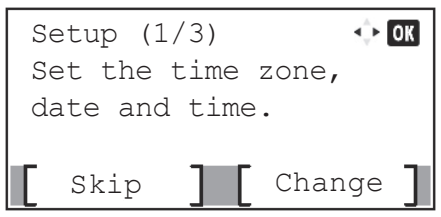

The screen moves to the next step.


4 Select [Change] when you set the IP address to use the machine on the network. Follow the instructions on the screen. If you set it later, select [Skip].

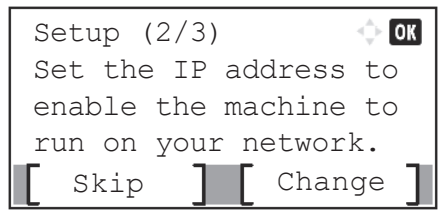


The screen moves to the next setp.

NOTE
Prepare the device and information according to the your environment.
For details of the network settings, refer to the Operation Guide.

5 Select [Change] when you set whether notify low toner via panel or not. If you set it later, select [Skip].

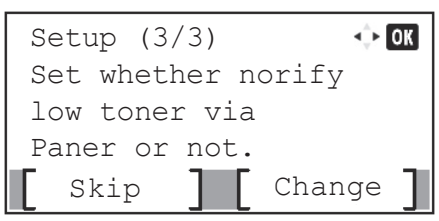


6 When the following screen appears, select [Finish].

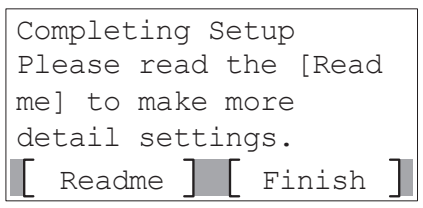


Step 6 Printing a Status Page

1 [**Menu**] key > [▲] [▼] key > [Report] > [**OK**] key > [▲] [▼] key > [Report Print] > [**OK**] key

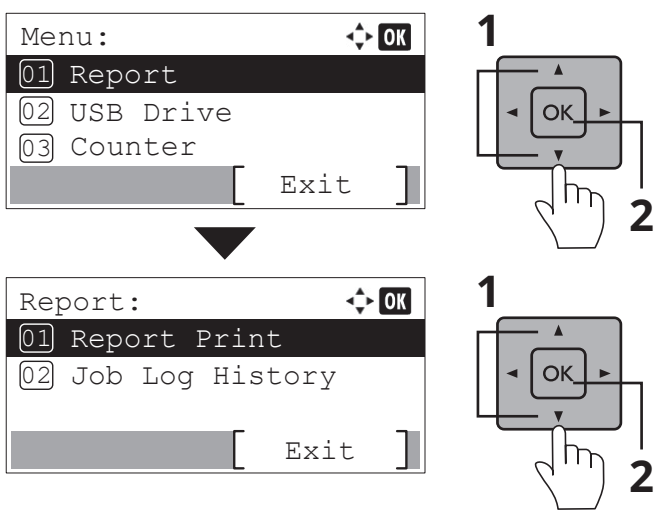

2 [▲] [▼] key > [Status Page] > [**OK**] key > [Yes]

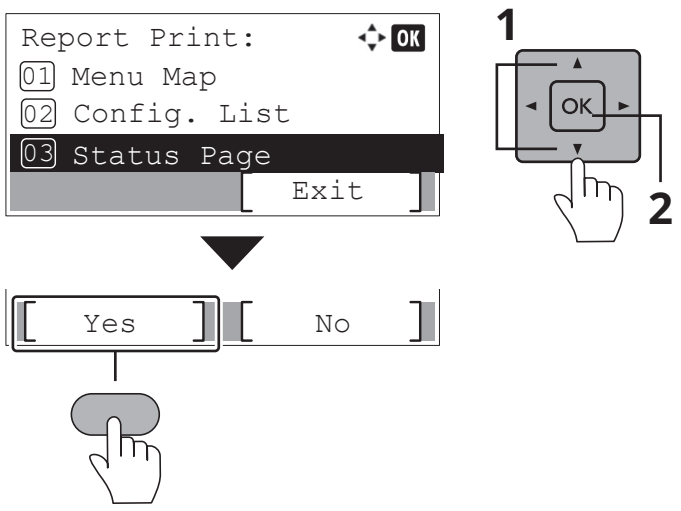

Step 7 Installing Software

Access the following URL and select your model and OS.
Download Center: https://kyocera.info/

For Windows
Download and run the Web Installer and follow the on-screen instructions to install the driver and software.



For Mac
Download and run the driver and follow the on-screen instructions to install.

