corrale

coolshine

User manual

SV12 JN.000000 PN.000000-00-00
00.00.00 VERSION NO.01



Contents

Controls
Using your straightener
Using the cooling attachment
Looking after your straightener

dyson

Controls

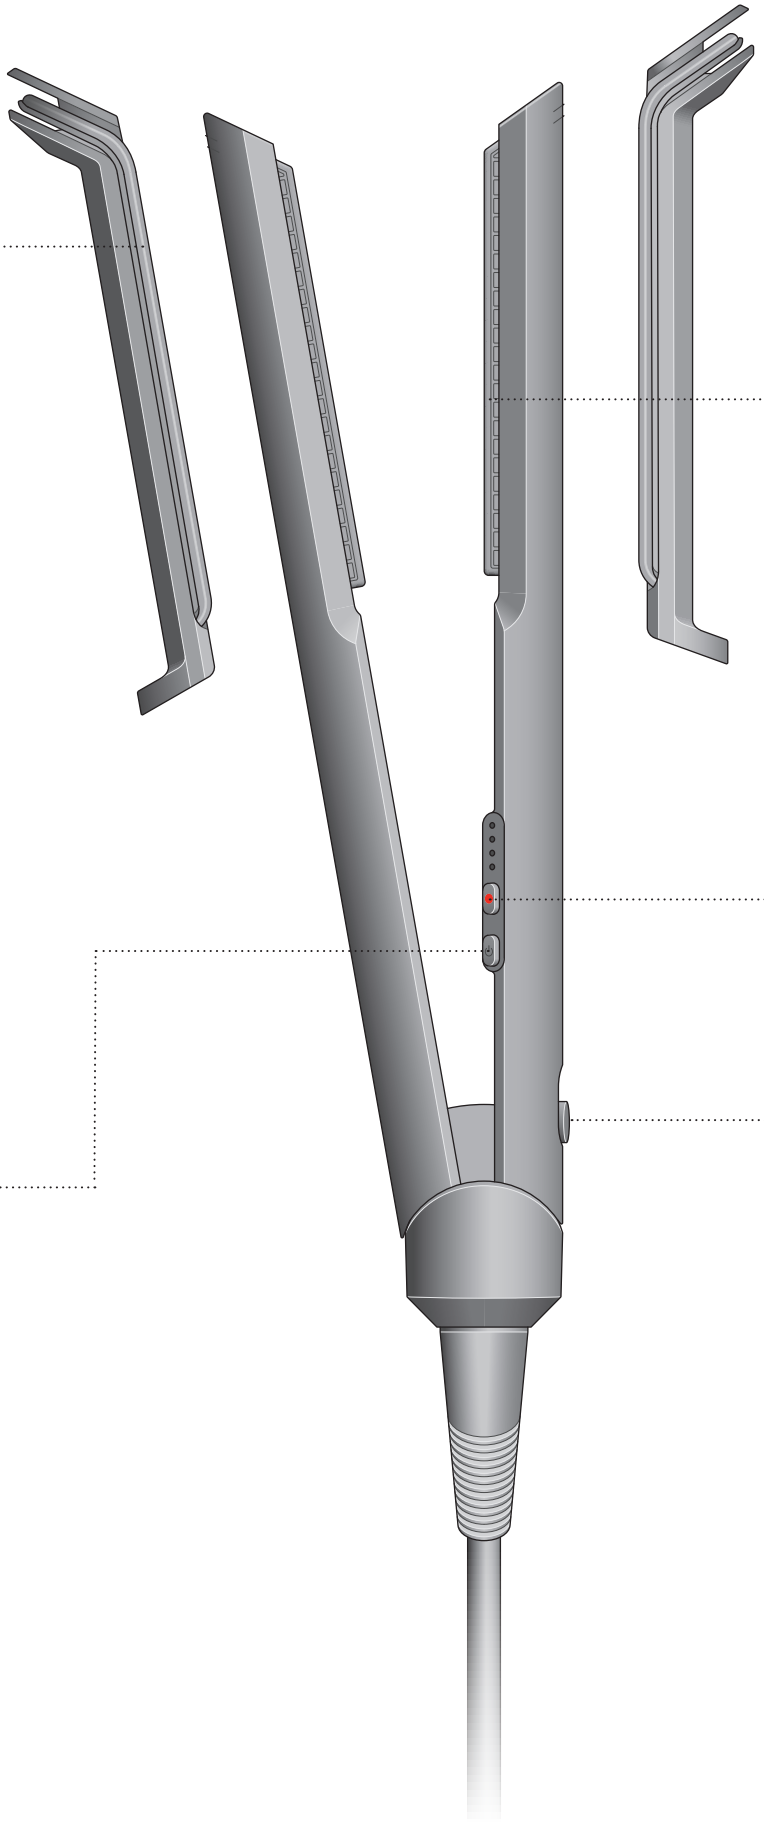

Heat extracting pipes
Engineered to draw heat away from your hair as you style for less heat damage, leaving it feeling cooler to touch after styling.

Flexing plates
Shape to gather and control your hair.

Temperature control button
Four heat settings.

Lock button
Conceals the flexing plates for immediate storage after use.

Power button
To switch your straightener on and off.

Using your straightener

Getting started
Before using your Dyson Corrale CoolShine™ straightener, make sure your hair is dry and tangle-free.



Turning on and off
Slide the Lock button to open your straightener. Press and hold the Power button.

Press the Temperature control button to cycle through the heat settings.

The lights will flash until the selected temperature has been reached.

To turn off, press and hold the Power button. Close your straightener and slide the Lock button to close. Leave the device to cool.

Sleep mode
If your Dyson Corrale CoolShine™ straightener is left unattended with the power on for longer than five minutes, the flexing plates will automatically switch off.

Press the power button to reactivate your straightener. The temperature will increase to the last setting used.

If your straightener is left unattended with the power on for a further five minutes, it will turn off completely.

Adjusting temperature
Your straightener has four settings, to enable you to style at lower temperatures.

To cycle between four heat settings, press the Temperature control button.

The four LED indicators display current heat setting.

Select the temperature that suits your hair type and styling preference.

The lights will flash until the selected temperature has been reached.

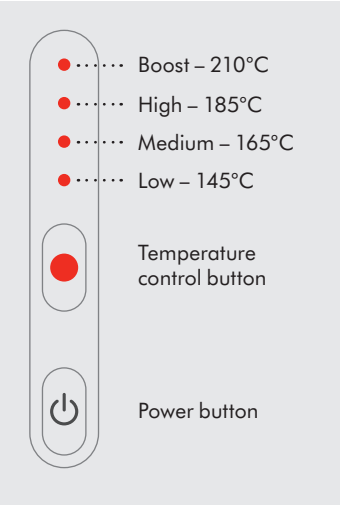

Travelling with your straightener
The Dyson Corrale CoolShine™ straightener has universal voltage for effortless styling, so you can take it with you wherever you're heading.

Go to www.dyson.com for styling tips and guides.

Using the cooling attachments

Tip
For best results, use the attachments for straightening hair.
Remove the attachments to style closer to the roots, and for more defined looks, such as curls or waves.

To Attach
Hold the tip of the attachment and slide it onto the arm of your device until you hear a click.

To Remove
Pinch the tip of the attachment to release it, then slide upwards and off the device.

Please note: the plates may still be hot to the touch.



Looking after your straightener

How to clean
Turn off the straightener and leave to cool before cleaning.

If attached, remove the attachments

Clean the flexing plates with a damp lint-free cloth.
Rub gently to remove any stubborn hair residue.

Do not use chemicals or abrasive products as this could damage product.

Clean the attachments using the same method. Ensure everything is fully dry before reassembly.

