xiaomi Smart Camera C701 User Manual

Read this manual carefully before use, and retain it for future reference.

Product Overview

Package Contents

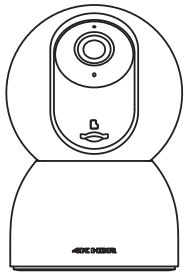

Xiaomi Smart Camera C701

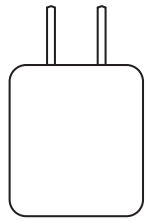

Power Adapter



Charging Cable
(2 meters)

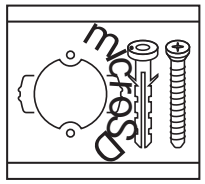

Wall Mounting Kit
(Base × 1, Wall Plug × 2, Screw × 2)

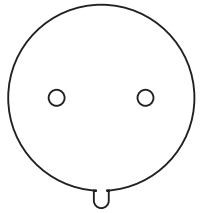

Mounting Template
Sticker

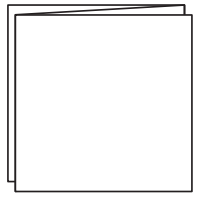

User Manual

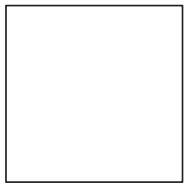

Warranty Notice

Note: Illustrations of product and accessories in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

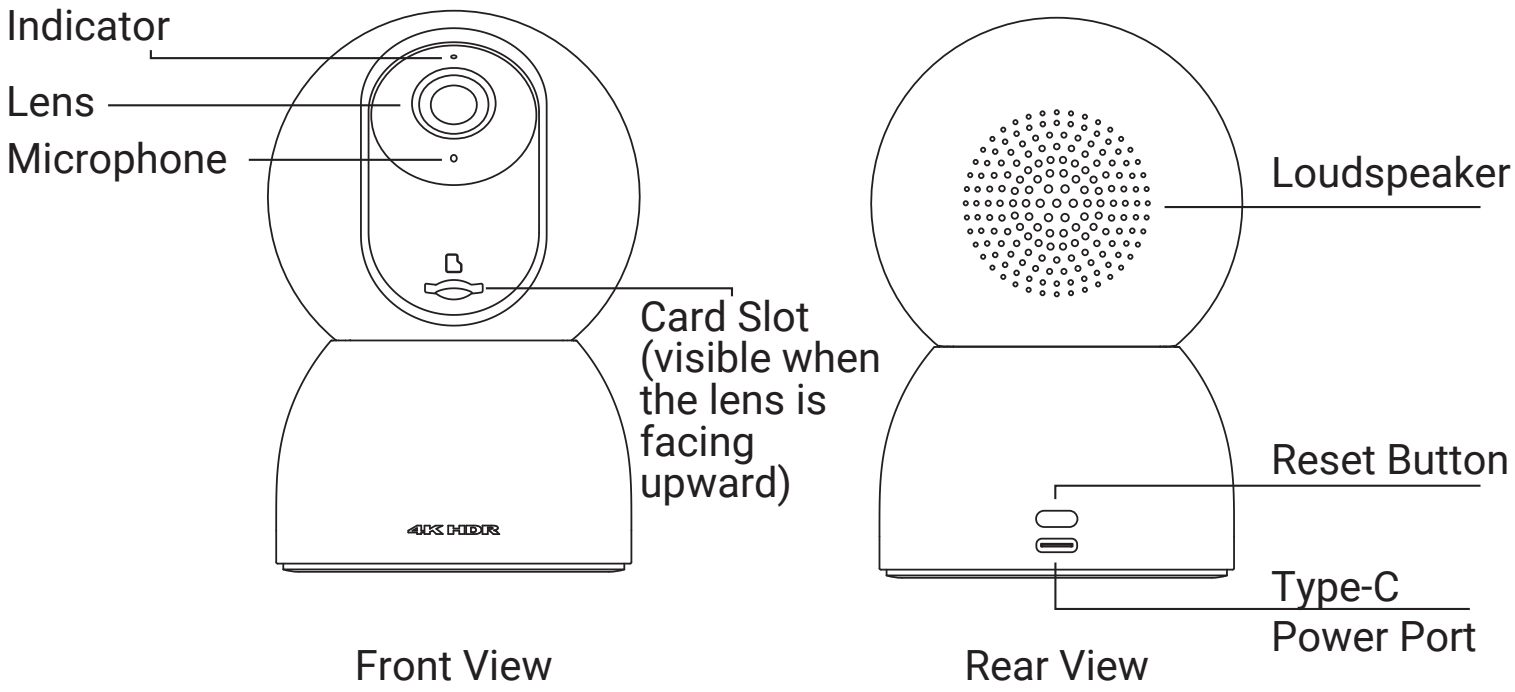

Connecting to Power Supply

- Turning On

  Plug the charging cable into the Type-C power port on the back of the camera. Then the camera will automatically turn on, with its indicator quickly blinking orange.
  Note: Do not forcibly rotate the camera's spherical body after turning on the camera. If the positioning of the lens is inaccurate, please calibrate it in the Xiaomi Home app.

- Indicator

  Keeping blue: Connected successfully/Working normally
  Blinking blue: Network error
  Blinking orange quickly: Waiting for connection
  Blinking orange slowly: Updating

Connecting with the Xiaomi Home App

This product works with the Xiaomi Home app. Control your device with Xiaomi Home app.
Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search for "Xiaomi Home" in the app store to download and install it. Open the Xiaomi Home app, tap "+" on the upper right, and then follow the instructions to add your device.

21755B64

Note: The version of the app might have been updated, please follow the instructions based on the current app version. When connecting, make sure the network connection is stable and the camera is turned on normally with its indicator quickly blinking orange. Once connected, the indicator remains blue.

- Restoring factory settings

  In case of changing the network that the camera is connected to or the Xiaomi Account in the Xiaomi Home app that the camera is paired with, press and hold the reset button for about 7 seconds until the indicator quickly blinks orange which indicates that the camera is successfully restored to factory settings. Then, reconnect the camera with the Xiaomi Home app.
  Note: Restoring factory settings will not delete the contents of the microSD card.

How to Install

- Installing a microSD card

  Make sure the camera is disconnected from the power supply. Rotate the lens upward to reveal the microSD card slot. Insert the microSD card into the card slot with its contact points facing downward.

  CAUTION: Disconnect the camera from the power supply before installing or removing the microSD card. Please use a microSD card (8 GB to 256 GB) manufactured by a qualified supplier. It is recommended to use a microSD card with a reading/writing speed of no less than U1/Class 10.

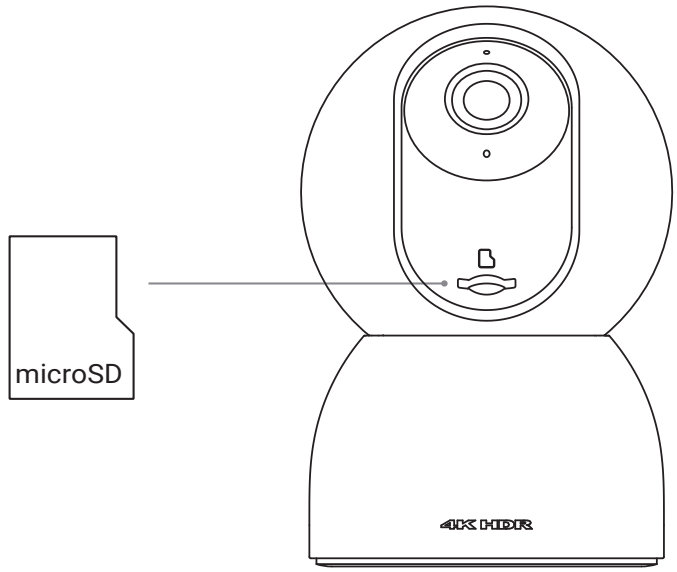

- Installing the camera

  The camera can either be placed on a desk, dining table, coffee table and other flat surfaces or mounted on a wall.

Mounting the camera on a wall:
1. Attach the mounting template sticker to the location for mounting the camera, and drill two holes in the wall with a drilling tool according to the location holes on the sticker. The diameter of each hole is approximately 6 mm, and the depth is approximately 30 mm.
2. Insert a plastic wall plug into each drilled hole.

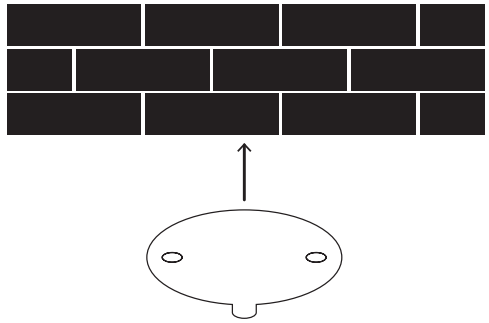

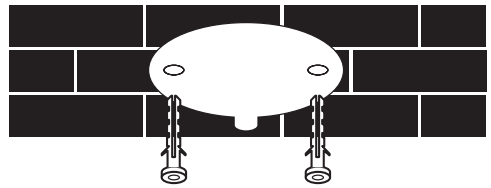

3. Keep the base side with an arrow facing outward, and align the holes in the base with the holes in the wall. Insert the screws into the base holes and then tighten them into the wall plugs with a Phillips screwdriver.
4. Align the groove on the bottom of the camera with the raised part on the base, and then turn the camera clockwise until it locks into place.

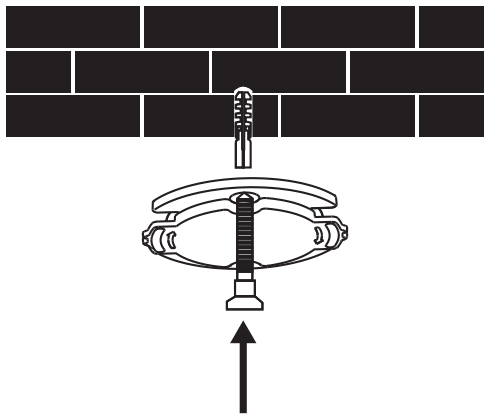

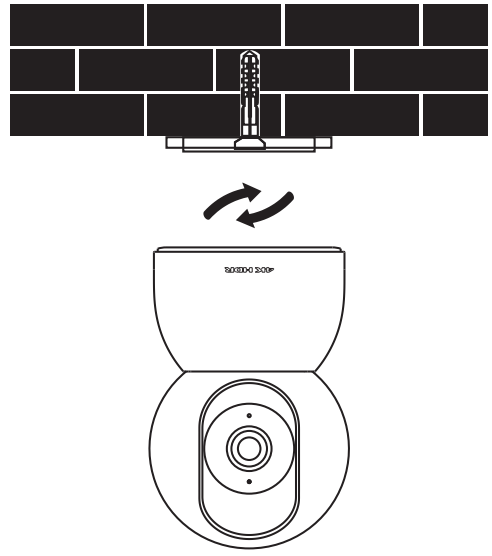

⚠ Wall-Mounting Precaution:

The wall must be able to support at least three times the total weight of the camera.

⚠ WARNING

The camera must be securely fixed to a ceiling or wall in accordance with the installation instructions to prevent injury.

Real-time Surveillance

In the camera's control interface of the Xiaomi Home app, you can view the real-time surveillance footage of the camera, adjust the sharpness of the images, adjust the horizontal and vertical angles of the camera, capture and record the images, and make remote calls.

Infrared Night Vision

The camera can automatically switch to night vision mode at night according to the change in ambient light. With its built-in infrared night vision lights, the camera is able to clearly capture images in the dark.

Playback

- The playback feature of the camera is only available when a compatible microSD card is installed or a cloud storage service is purchased for the camera.
- In the camera's control interface of the Xiaomi Home app, tap the playback button to enter the playback interface, and then drag the

timeline to select the time period to be played back. You can also change the playback speed.

Automatic Surveillance

- When the home surveillance feature is enabled, the camera will record videos once it detects human movement and changes within its monitoring area, and push the recorded videos to the Xiaomi Home app, accomplishing the automatic surveillance.
- You can enable or disable the home surveillance feature in the camera's control interface.
- You can set the surveillance time to 24-hour, daytime, or nighttime, and customize the surveillance time and the alert time interval.

Video Sharing

In the camera's control interface of the Xiaomi Home app, select the device sharing option in the settings menu to set the camera as a shared device and invite others to view. The users that the camera is shared with need to download the Xiaomi Home app and log in with their Xiaomi Account to view contents.

Physical Lens Blocking

When the camera is not in use, you can tap "Settings > Camera settings > Physical lens blocking settings" to enable the physical lens blocking feature or set scheduled automatic physical lens blocking. The camera will automatically adjust the lens so that the lens is covered by the camera casing to protect the user's privacy.

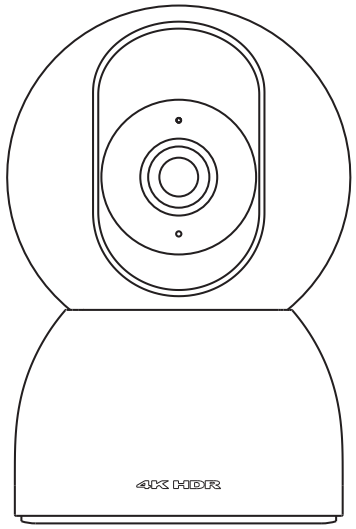

Normal

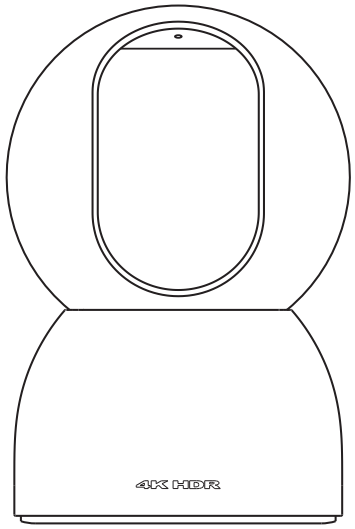

Blocked

Specifications

Name: Xiaomi Smart Camera C701
Model: MJSXJ27CM
Item Dimensions: 79 × 79 × 119 mm
Net Weight: Approx. 297 g
Storage: microSD Card (8 GB to 256 GB)
Operating Temperature: -10°C to 40°C
Compatible with: Android™ 8 & iOS 12.0 or above
Wireless Connectivity: Wi-Fi IEEE 802.11 a/b/g/n/ac/ax 2.4 GHz/5 GHz, Bluetooth 5.4
Wi-Fi Maximum Output Power:
20 dBm (2400–2483.5 MHz)
20 dBm (5150–5350 MHz)
20 dBm (5470–5725 MHz)
14 dBm (5725–5850 MHz)
Bluetooth Maximum Output Power: 10 dBm (2402–2480 MHz)
Frequency bands of 5 GHz Band 3 (5650–5725MHz) are unavailable for the camera in Malaysia.

Resolution: 3840 × 2160
Video Codec: H.265
Input: 5 V = 2 A

Note: Product specifications and safety information are shown in the user manual and on the product's bottom.

Precautions

- The operating temperature range for the camera is between -10°C and 40°C. Do not use the camera in environments with temperatures above or below the specified range.
- The camera is a precision electronic product. In order to avoid affecting the camera's normal operation, do not use the camera in environments that are excessively humid or may cause water to enter the camera.
- To ensure the camera's performance, do not place its lens facing or next to reflective objects, such as glass windows or white walls, as this will cause the image to appear overly bright in areas close to the camera and darker in areas further away, or cause the camera to produce white images.
- Please install the camera in areas within the range of Wi-Fi coverage, and place the camera where the Wi-Fi signal is strong as much as possible. Do not install the camera near objects that may affect the Wi-Fi signal, such as metal objects and microwave ovens.
- Please use the original power adapter provided with the camera to prevent camera errors due to insufficient power supply.
- Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.

WEEE Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste.

Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

EU Declaration of Conformity

CE Hereby, Xiaomi Communications Co., Ltd. declares that the radio equipment type Xiaomi Smart Camera C701 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
https://www.mi.com/global/service/support/declaration.html
For detailed e-manual, please go to
www.mi.com/global/support/user-guide

External AC Adapter Specifications

Manufacturer: Jiangxi Jian Aohai Technology Co., Ltd.
Model Identifier: A232-050200U-EU2
Input Voltage: 90–264 VAC
Input AC Frequency: 47–63 Hz
Output Voltage: 5 V
Output Current: 2 A
Output Power: 10 W
Average Active Efficiency: ≥ 79.04%
Efficiency at Low Load (10%): > 76%
No-load Power Consumption: < 0.1 W

							

Importer:
Beryko s.r.o.
Pod Vinicemi 931/2, 301 00 Plzeň

www.beryko.cz