
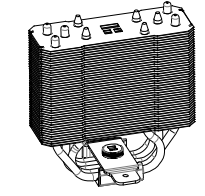
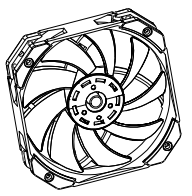
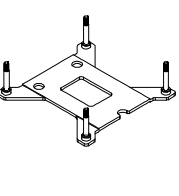










INSTALLATION GUIDE
TR-TA120 EX mini
Series

www.thermalright.com


Parts list

 A Heatsink x1	 B Fan x1	 C LGA 115X BACKPLATE X1
 D INTEL Bracker x2	 E AMD Bracker x2	 F Fan Clip x4
 H LGA20XX screw x4	 I Tightening Nut X4	 J AM4 Screw X4
 L model patch cord x1	 M Fastening screw x2	 K Thermal Grease X1

AMD AM4

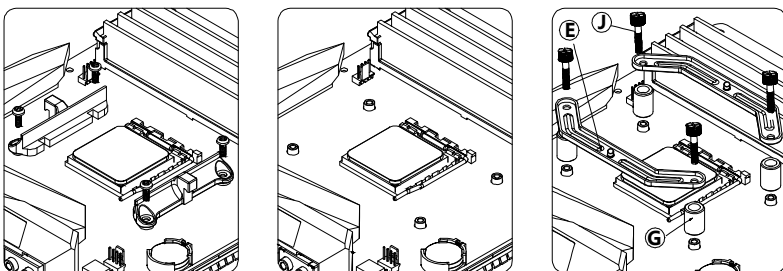


Remove plastic retention bracket,but keep the backplate;secure the brackets using the AM4 screws

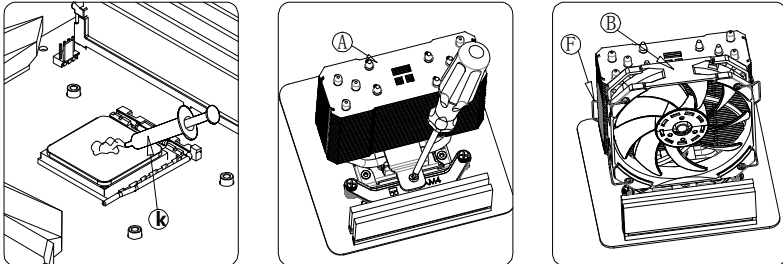


Apply a thin layer of thermak grease; and then secure heatsink

INTEL LGA115X

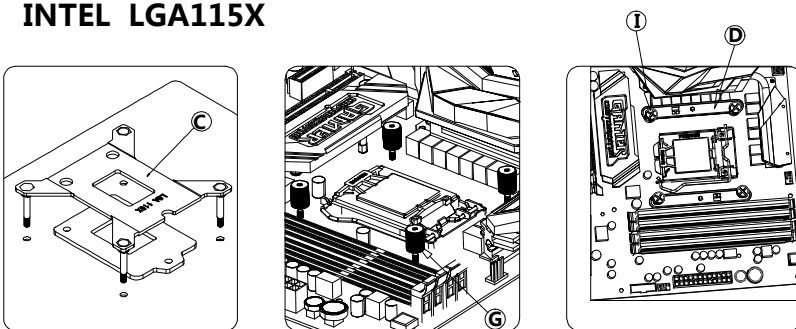


put the backplate through the back of the motherboard;put on the standoffs and the LGA115X bracket,and then tightening the nuts to secure.

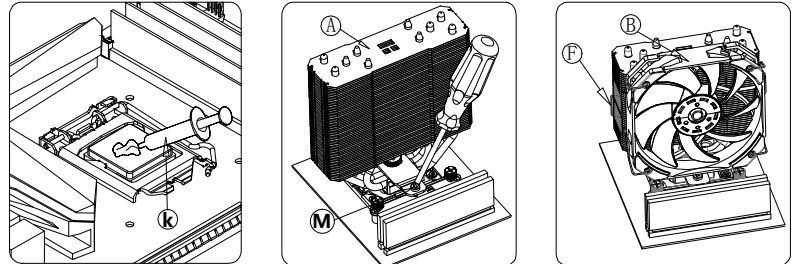


Apply a thin layer of thermal grease; and then secure heatsink.

INTEL LGA20XX

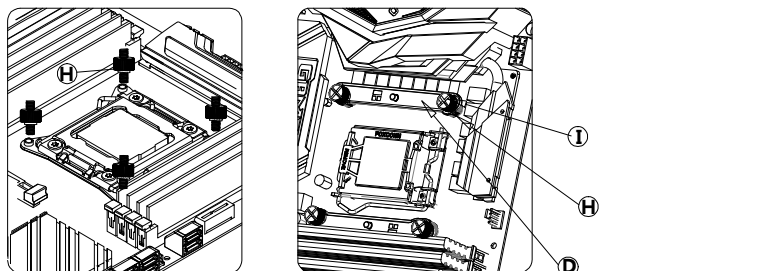


Thread in the LGA20XX screws;put on the brackets and then tightening with nuts.

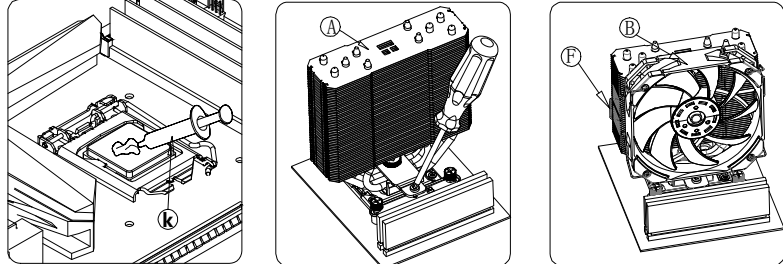


Apply a thin layer of thermal grease; and then secure beatsink.

Fan wiring

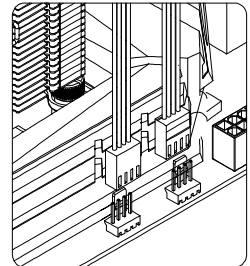

Insert the 4-pin PWM connector of the FAN into the CPU FAN socket of the motherboard.For double fans, please use y-type connector.

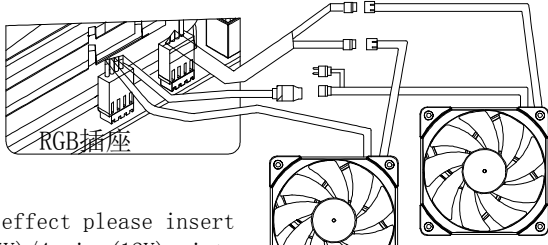

if the fan has RGB iamp effect please insert RGB lamp effect 3-pin (5V)/4-pin (12V) into the motherboard corresponding to RGB lamp effect socketor controller,and connect multiple fans in seriis















安装说明
TR-TA120 EX mini
Series

www.thermalright.com


配件清单

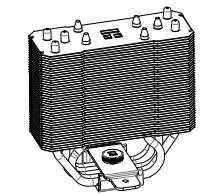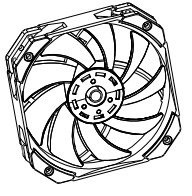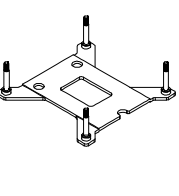 A 散热器x1	 B 风扇x1	 C LGA115X背板x1
 D INTEL 支架 x2	 E AMD 支架 x2	 F 风扇扣 x4
 G 胶柱 x4	 H LGA20XX螺丝x4	 I 螺丝x4
 J AM4螺丝x4	 K 导热膏x1	 L Y型转接线 x1
 M 紧固螺丝x2		

AMD AM4

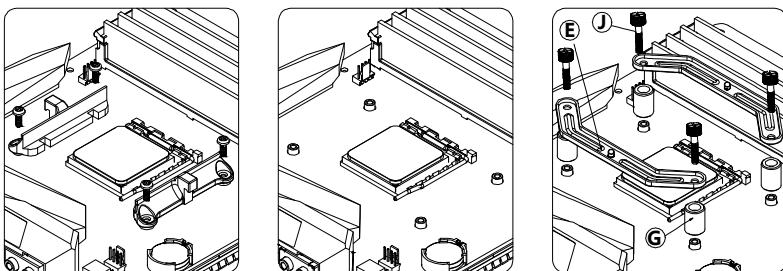


移除AMD 原装塑胶支架，保留背板；使用AM4螺丝将AMD支架固定到背板

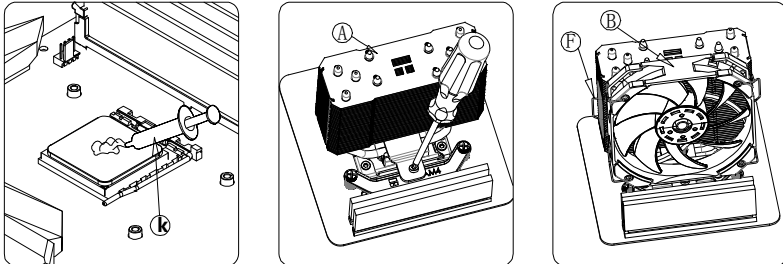


涂好导热膏，然后用螺丝刀嵌好主体，再用风扇线扣固定风扇。

INTEL LGA115X

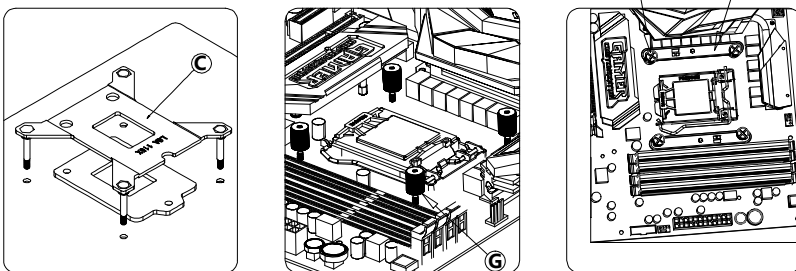


将LGA115X背板放置在主板背面，然后从正面放置胶柱，支架再用螺帽固定住INTEL支架。

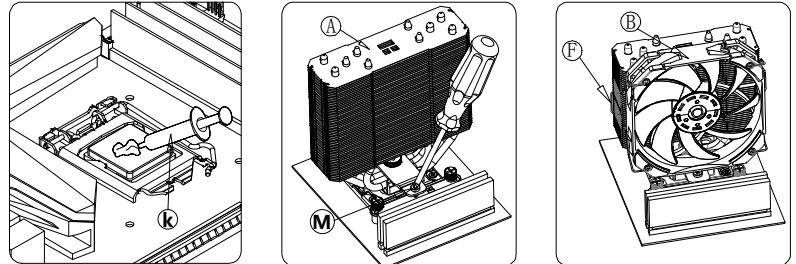


涂好导热膏，然后用螺丝刀嵌好主体，再用风扇线扣固定风扇。

INTEL LGA20XX

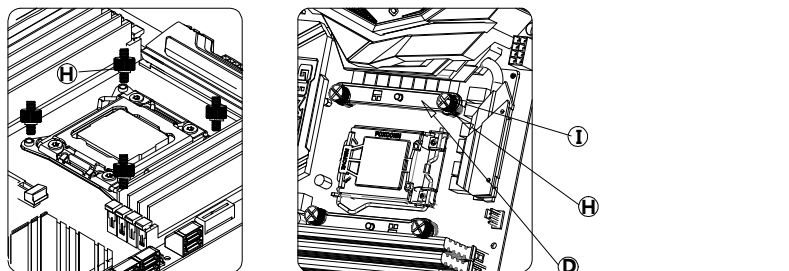


将LGA20XX螺柱拧到主板，然后放置支架，再用螺帽固定住INTEL支架。

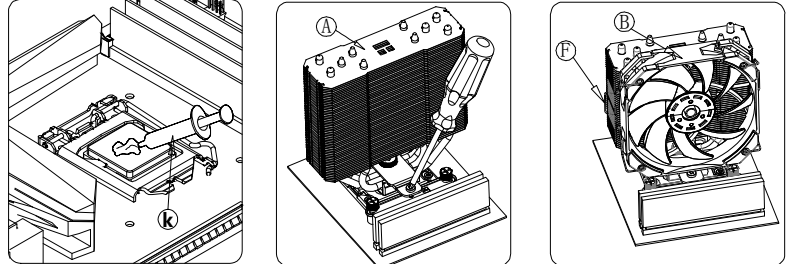


涂好导热膏，然后用螺丝刀嵌好主体，再用风扇线扣固定风扇。

风扇接线

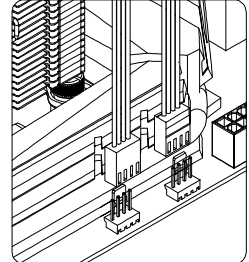

将风扇 4针PWM接头插入主板CPU FAN 插座
如使用双风扇，请使用Y型转接线。

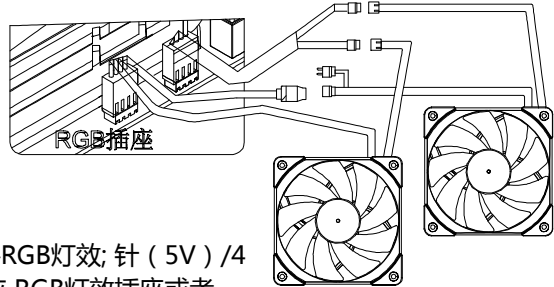

如风扇有RGB灯效 请将RGB灯效: 针 (5V) /4
针 (12V) 插入主板对应 RGB灯效插座或者
控制器，多风扇之间为串联。

