Getting started with Wacom MovinkPad Instant Pen Display Mode

Index

- Introduction: What is Wacom MovinkPad Instant Pen Display?
  - What you need / specs
- Step 1: Software installation and preparation
  - Set up your computer
  - Set up your MovinkPad
- Step 2: Device connection
  - Wireless (Wi-Fi) connection
  - Wired (USB) connection
- Step 3: Computer screen mirroring
  - Computer screen mirroring
- Step4 : Uninstalling

Introduction:
What is Wacom MovinkPad Instant Pen Display?

Wacom MovinkPad Instant Pen Display is a software that allows you to connect your Wacom MovinkPad to your computer, converting it into a pen display.


The software allows you work with content directly on your Wacom MovinkPad that was previously only accessible on your computer. It enhances your productivity and flexibility not only for creative tasks such as illustration and design, but also for document editing.
Both wireless (Wi-Fi) and wired (USB) connections are supported

You can choose either connection to match your workplace.



What you need

1. Wacom MovinkPad
2. Wacom Wacom Pro Pen 3
3. USB cable
4. Computer (Windows or Mac)
5. "Wacom MovinkPad Instant Pen Display" application (for computer)

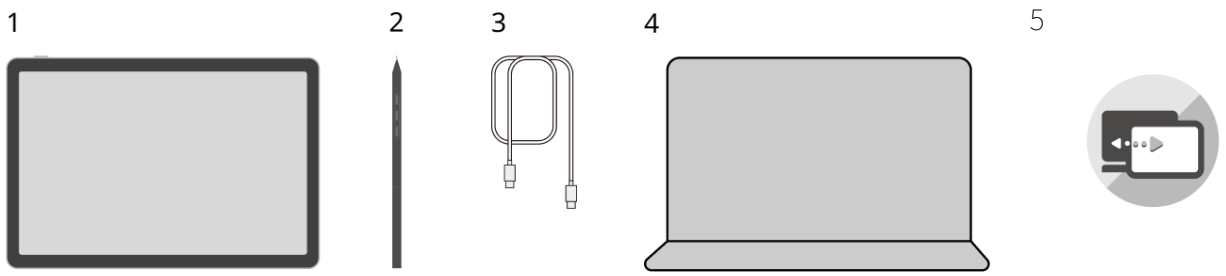

Compatible computer specs


- Windows: Windows 11
  *Windows ARM-based computers are not supported.


- Mac: macOS 14 (Sonoma), 15 (Sequoia)
  *Intel Mac computers are not supported.

Step 1: Software installation and preparation


Computer setup:
Download and installation of “Wacom MovinkPad Instant Pen Display” software

1. Open the “Settings” app and select “Register a product” from Wacom Support.

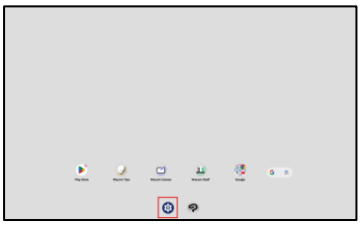


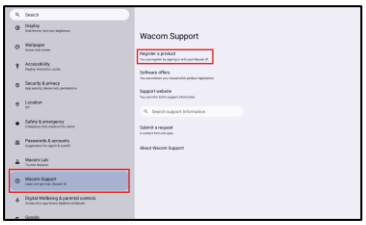


2. Login with Wacom ID.
(If you have not yet registered your product, please do that first on your MovinkPad before returning to this step.)

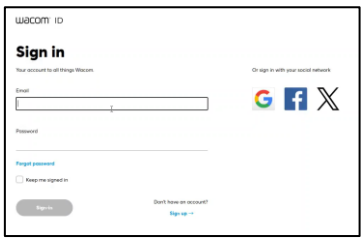

3. After logging into your Wacom ID Account, click on Software Offers. Install the Wacom MovinkPad Instant Pen Display application that is compatible with your OS.

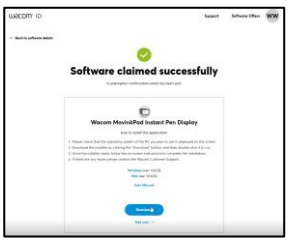


4. Run the installer and follow the instructions on screen.

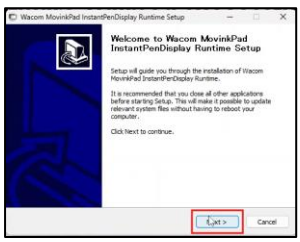

For macOS users: Additional settings

1. After installing the software, open "System Settings", then select "Privacy & Security".

2. Go to "Screen & System Audio Recording," then click the "+" icon. Choose "Wacom MovinkPad Instant Pen Display" from the Application list to enable access.

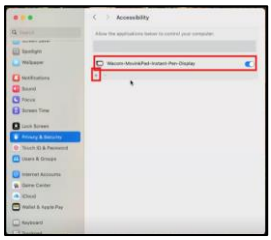


3. After that, go to "Accessibility," then click the "+" icon. Choose "Wacom MovinkPad Instant Pen Display" from the Application list to enable access.

4. If your computer is running macOS 15, you will also need to launch the Wacom MovinkPad Instant Pen Display application and click “Allow”.




5. This can be checked from System Settings > Privacy & Security > Local Network.
(You will not need to do this step for macOS 14.)

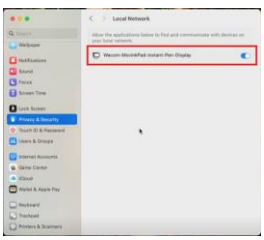


Wacom MovinkPad setup: Enable “Instant Pen Display Mode” from Wacom Lab

1. Open the Settings app and click on Wacom Lab on the category menu on the left.
   Review and accept the EULA Special Provisions.

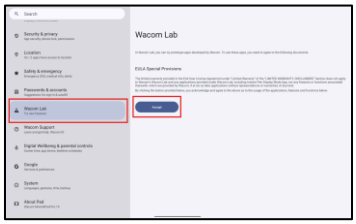

2. Then, turn on Instant Pen Display Mode.

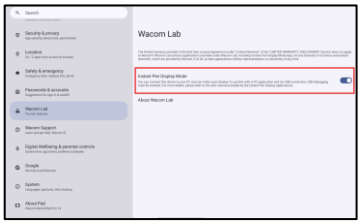

3. Swipe down from the top of the screen and tap “Instant Pen Display Mode”.



Startup procedure for both connections

- Wacom MovinkPad : Swipe down from the top of the screen and tap Instant Pen Display Mode from the Quick Settings panel.

- Computer:
  - Windows: Launch “Wacom MovinkPad Instant Pen Display” from all applications of the Start menu.
  - Mac: Launch “Wacom MovinkPad Instant Pen Display” from the application folder.

Step 2: Device connection


There are two ways - wireless (Wi-Fi) and wired (USB) - to connect your computer and Wacom MovinkPad.
You can choose either connection to match your workplace.

Wireless (Wi-Fi) connection


1. Before you begin, make sure your computer and Wacom MovinkPad are connected to the same WiFi network.
2. On your computer, launch the Wacom MovinkPad Instant Pen Display application.



3. In the MovinkPad tab, make sure that your Movinkad appears in the "MovinkPad on the same network" section.

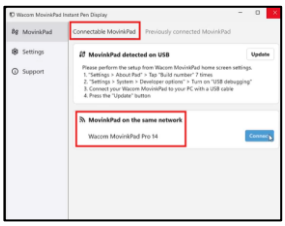

4. Click the "Connect" button on the right of the MovinkPad that appears in this section.

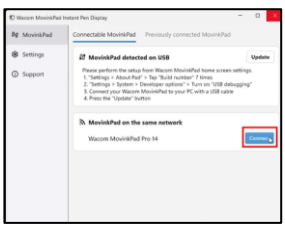


5. You will see a six-digit input field on your computer screen,



6. Enter the six-digit passcode shown on your Wacom MovinkPad and press Enter.

7. Once the passcode is verified, the connection is complete, and your computer screen will be mirrored on the Wacom MovinkPad.
(This passcode verification is only needed for the initial connection.)

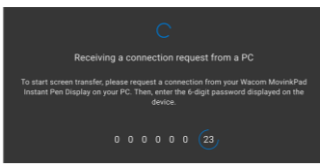


Wired (USB) connection

* When using a USB connection, you need to enable Developer options. Changing the Developer options settings may cause the device or apps to function improperly.

1. To begin, open the Settings app, and select "About Pad" from the menu on the left.




2. Scroll down to "Build Number" and tap 7 times.

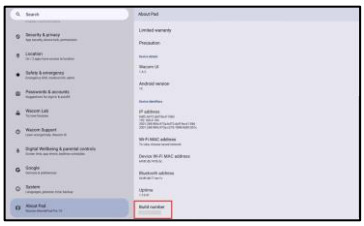


3. Enter your passcode, and the developer options will be available.


4. Select "System" from the menu on the left, then choose "Developer Options."

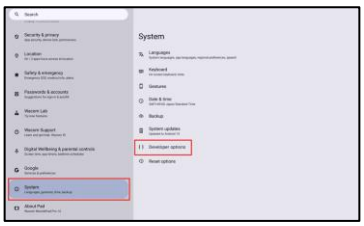


5. Scroll down and enable USB debugging. When the "Allow USB debugging" window appears, select OK.

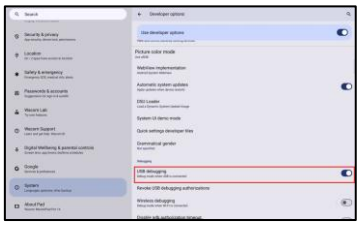

6. Swipe down from the top of the device to open the shortcut menu and tap Instant Pen Display Mode. This should launch the application, and you will see a random six-digit number appear on your screen.

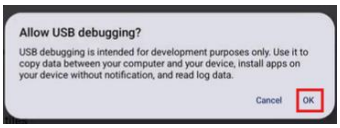

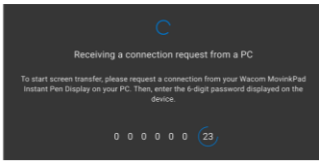

7. Connect your computer and Wacom MovinkPad with a USB-C cable.
   * If you are running macOS, you will see a message that says, "Allow USB debugging?". Select Allow.




8. On your Wacom MovinkPad, you will also see the "Allow USB debugging?" message. Select Allow. If you do not wish to see this message again, select "Always allow from this computer".




9. Launch the Wacom MovinkPad Instant Pen Display application on your computer.



10. Confirm that your Wacom MovinkPad appears in the "MovinkPad" tab.
    If it does not appear, click "Update" to the right of the "Wacom MovinkPad detected on USB" message.

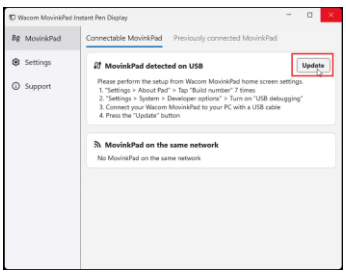

11. Click the Connect button on the right of the MovinkPad. Your computer screen will now be mirrored on the Wacom MovinkPad.

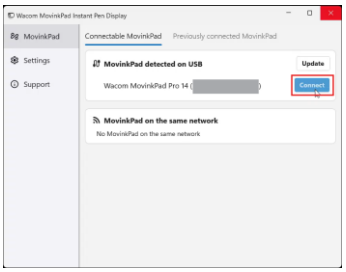

Step 3: Computer screen mirroring

Computer screen mirroring

By connecting Wacom MovinkPad to your computer, your computer screen will be mirrored on the Wacom MovinkPad.

You can directly operate your computer by using your pen and touching the screen of Wacom MovinkPad.

While mirroring your screen, sidebar with computer keyboard shortcut will appear by clicking the side switch on your Pro Pen 3 on Wacom MovinkPad.



Disconnecting


Disconnecting can be done

from either the Wacom MovinkPad or your computer.

1. To disconnect from your Wacom MovinkPad, just tap the Disconnect icon on the sidebar.



2. To disconnect from your computer, go to the MovinkPad tab on the Wacom Instant Pen Display application. Then, click the Disconnect button to the right.

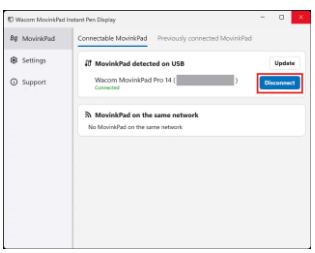

Step4 : Uninstalling

Uninstalling

- Windows :
  From the Windows Settings menu, go to Installed apps, select the “⋯” (More options) next to Wacom MovinkPad Instant Pen Display and choose Uninstall.
  Follow the same steps to remove Wacom MovinkPad InstantPen Display Runtime as well.

- Mac:
  Drag the Wacom MovinkPad InstantPen Display icon to the Trash.
  To permanently delete the app, right-click the item in the Trash and select Delete Immediately.