

User Manual

Hair Straightener
DHST-01

DEXP

Contents

Intended Use	3
Safety Precautions	3
Specifications	4
Package Contents	4
Device Diagram	5
Operating Instructions	5
Display.....	5
Modes	6
Operation.....	6
Error Codes	6
Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal	7
Warranty Information	8
Additional Information.....	8

Dear Customer,

Thank you for choosing our products.

We are pleased to offer you appliances and devices designed and manufactured to the highest standards of quality, functionality, and design. Before using the device, please read this manual carefully. It contains important information regarding your safety, as well as recommendations for the proper use and care of the product. Please keep this manual in a safe place and use it as a reference guide during future operation of the product.

Intended Use

The straightener is designed for curling, straightening, and styling hair.

Safety Precautions

- Please read this instruction manual carefully before use and keep in a safe place for future reference.
- Before connecting the device to a power source, ensure that your home electrical network parameters match its technical specifications.
- Use the device only for its intended purpose.
- Do not use the device in the bathroom, near sinks, or any other containers filled with water.
- Do not block the ventilation openings of the device.
- To avoid the risk of electric shock or injury, do not immerse the device, power cord, or plug in water or any other liquid.
- Do not touch the device, plug, or power cord with wet hands.
- Always unplug the device when not in use and before cleaning.
- Immediately disconnect the device from the power source in case of malfunction, as well as in case of damage to the cord or plug. Contact an authorized service center.
- Do not pull or move the device by the cord. Do not bend or wrap the cord around the device. Ensure the power cord does not bend over the edge of the countertop or come into contact with hot surfaces or sharp edges.
- Do not turn on the device when its plates are closed. Be sure to open them before turning on.
- Do not leave the device plugged in and unattended.
- Before storing the device, allow it to cool down.
- Place the hot device only on a heat-resistant, stable, flat surface. Keep it away from flammable objects and materials.
- Never cover the device (e.g., with a towel or clothing) while it is hot.
- Be cautious when handling the device, as some parts may become extremely hot during operation. Hold the device only by the handle and avoid contact of hot parts with skin.
- This device is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the device.
- This device is not intended for commercial use.


Specifications

- Model: DHST-01.
- Trademark: DEXP.
- Power supply: 220–240 V ~ 50–60 Hz.
- Power: 700 W.
- Motor: BLDC.
- Motor speed: 100,000 RPM.
- Modes: Drying, straightening, mixed.
 - Drying temperature: 25 / 80 / 110 / 140 °C.
 - Straightening plate temperature: 180 / 200 / 220 °C.
 - Mixed mode: adjustable airflow and plate heating.
- Air flow function: Yes
- Cold air function: Yes.
- Ionization: Tourmaline.
- Self-cleaning function: Yes.
- Nozzle/plate coating: Ceramic-tourmaline.
- Cord length: 2.1 m.
- Protection class: II.
- Cord type: Y.
- Scope of application: Domestic.

Package Contents

- Device.
- User manual.


Device Diagram

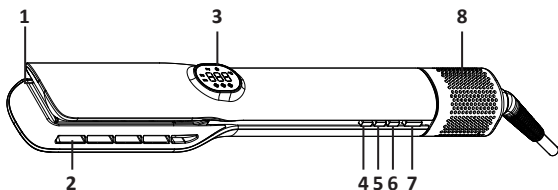

1. Heating plates.
2. Air outlet vents.
3. Display.
4. Air flow adjustment button — «».
5. Temperature adjustment button — «».
6. Mode selection button — «M».
7. Power button — «».
8. Air intake vents.

Operating Instructions

Display

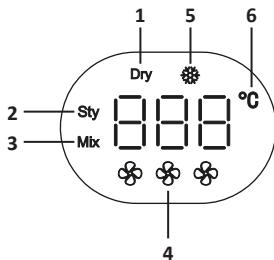

1. «Drying» mode indicator.
2. «Straightening» mode indicator.
3. «Mixed» mode indicator.
4. Air flow level indicators: the more «» indicators, the higher the speed.
5. Cold air indicator (25 °C).
6. Temperature degree indicator.

Modes

- Drying:
 - Air temperature adjustment (25 °C, 80 °C, 110 °C, 140 °C).
 - Air flow level adjustment (3 levels).
- Straightening:
 - Plate temperature adjustment only (180 °C, 200 °C, 220 °C).
- Mixed mode:
 - Air temperature adjustment (25 °C, 80 °C, 110 °C, 140 °C).
 - Air flow level adjustment (3 levels).
 - Plate temperature adjustment (180 °C, 200 °C, 220 °C).
 - Can be used on wet hair.

Operation

1. Plug the power cord into an electrical outlet.
2. To turn on the device, press and hold the power button until the display lights up.
3. To select a mode, press the «M» button.
4. Press the «↓» and «↺» buttons to adjust the temperature and air flow, respectively.
5. Dry/straighten small strands of hair to achieve the best result. Smoothly glide the device from roots to ends of hair.
6. To turn off the device, press and hold the power button until the display turns off.
7. Disconnect the device from the power supply and wait for it to cool down completely.

Error Codes

In the event of a malfunction, error codes will appear on the display. Disconnect the device from the power source and allow it to cool down. If the errors persist, contact an authorised service center.

Error Code	Description
E01	Temperature sensor malfunction
E02	Low mains voltage
E03	High mains voltage
E04	Motor stall
E05	Exceeding the permissible number of motor revolutions
E06	Software overcurrent
E07	Phase controller failure
E08	Device overcurrent
E09	Excessive zero crossing

Error Code	Description
E10	Startup failure

Rules and Conditions for Installation, Storage, Transportation, Sale (Distribution), and Disposal

- This device requires no assembly or mounting.
- The device must be stored in its original packaging, on heated premises, both at the manufacturer's and at the consumer's sites. The ambient temperature should be between +5 °C and +40 °C, and the relative humidity should not exceed 80% (non-condensing). The storage area must be free from aggressive contaminants (e.g., acid or alkali vapors) that could cause corrosion.
- The device must be transported in a dry place.
- The device requires careful handling. Protect it from exposure to dust, dirt, impact, moisture, fire, and other hazards.
- Sale or distribution of the device must be carried out in accordance with local legislation.
- Upon expiration of the device's service life, it must not be disposed of with unsorted household waste. Instead, it must be taken to an authorized collection point for electrical and electronic equipment for subsequent recycling and disposal in accordance with federal or local legislation. By ensuring proper disposal of this product, you help conserve natural resources and prevent potential harm to the environment and human health that may result from improper handling. For more detailed information about collection and disposal points for this product, please contact your local municipal authorities or your household waste disposal service.
- If a device malfunction is detected, immediately contact an authorized service center or dispose of the device.

Warranty Information

The manufacturer guarantees the device will function properly throughout the warranty period and be free from defects in materials and assembly. The warranty period commences on the date of purchase and applies to new products only. Warranty service includes free repair or replacement of defective parts that fail during the warranty period, provided the failure is not caused by consumer misuse and the product is operated in accordance with the user manual. Repairs or part replacements shall be performed at authorized service centers.

Warranty Period: 24 months.

Service Life: 24 months.

For the up-to-date list of authorized service centers, please visit:

<https://www.dns-shop.ru/service-center/>

Additional Information

Manufacturer: Guangdong Roman Technology Co., Ltd.

No.18, Xinguang Road, Zhangmutou Town, Dongguan City, Guangdong Province, P.R. China.

Made in China.

The product meets the requirements of the technical regulations of the TR CU (EAEU).

Product specifications, information and appearance are subject to change without prior notice, for quality improvement of our products.



Production date (mm.yyyy): _____ V.1

