





Questo manuale d'istruzione è fornito da [Trovaprezzi.it](#). Scopri tutte le offerte per [Amazfit Balance 2 Grigio](#) o cerca il tuo prodotto tra le migliori offerte di [Smartwatch e wearable](#)

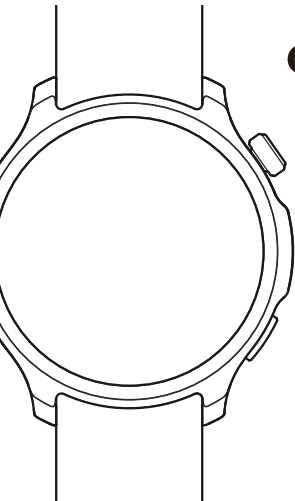

# amazfit

## BALANCE 2

## Package Contents

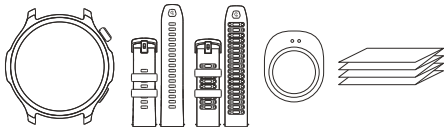


Watch Body

Watch Strap × 2

Charging puck Instruction Manual

## About the Watch

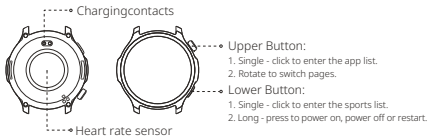

Note: Power on the watch by long - pressing the lower button. In case of failed startup, charge the watch and then retry.

## Pairing the Watch

Zepp is a must-have app for this watch. It provides scientific sleep and workout guidance and personalized health services to help you start a healthy lifestyle.

1. Use your mobile phone to scan the QR code on the right side to download and install the app, or search for the app in the Google Play Store or Apple App Store and then download and install the the latest version of the app.
2. Open the app, register an account and log in.
3. Pair the watch as prompted by the app.




Download Zepp App

### Notes:

1. For better user experience, please use the most recent version of the app.
2. The operating system needs to be Android 7.0, iOS 15.0, or above.
3. Do not pair the watch directly using your mobile phone's Bluetooth. Follow the steps in the app to pair your watch correctly.

## Charging the Watch

1. Use a Type-C USB cable to connect the charging base to a power adapter or computer. Ensure a secure connection for proper charging.
2. Put the watch into the charging base. Pay attention to the direction and position of the watch, and make sure that the metal contacts on the back of the watch fit closely with the charging base.
3. When charging starts, the watch screen displays the charging progress.

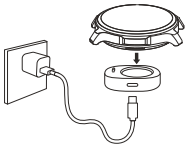

Notes:

1. Please use the charging base that comes with the watch. Make sure that the charging base is dry before charging.
2. To ensure the best charging speed, it is recommended to use a power adapter with a charging current of 1A or above.

## Disassembling and Assembling the Watch Strap

Please refer to the illustrations to disassemble or assemble the watch strap.




Note:

Once the strap is assembled, pull the strap properly to ensure it is installed successfully.


## Disassembling and Assembling the Watch Strap

1. Take the strap out of the packaging box, ensuring the short strap is on top and the long strap is on the bottom, with the correct orientation.
2. Align the strap pin with the lug hole, insert one end first, then use your finger or a tool to press the spring bar, allowing the other end to snap into the lug hole.
3. After installation, gently pull the strap to ensure it is securely installed.
4. To remove the strap, please refer to the illustration.

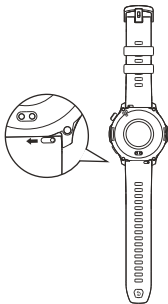

## Wearing the Watch

1. In order to ensure the accuracy of heart rate, blood oxygen, and other measurements, please wear your watch at a distance of at least one finger away from the carpal, and keep the strap at a comfortable snugness.
2. During workout, please wear it as tightly as possible to ensure that the watch does not shake. Wear your watch at a distance of at least one finger away from the carpal to obtain more accurate heart rate data. After workout, you can loosen the strap appropriately to ensure a comfortable wear experience.
3. When measuring blood oxygen saturation, wear the watch correctly. Avoid wearing the watch on the wrist joint, keep your arm flat, maintain comfortable (appropriately tight) fitting between the watch and the skin of your wrist, and keep your arm still throughout the measurement process.

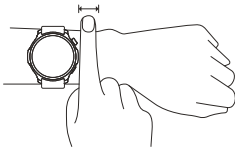

Note: When affected by external factors (arm sag, arm sway, arm hair, tattoo, etc.), the measurement result may be inaccurate or the measurement may fail and provide no output.

## Basic Parameters

Product Name: Smart Watch

Model number: A2429/A2430

Input: DC 5 V 1.5 A MAX

Bluetooth version: V5.2

Wi-Fi: 2.4 GHz 802.11 b/g/n

Wi-Fi frequency: 2402-2480 MHz

View product certification information on the watch's Settings > System >

Regulatory page.

Device requirements: Devices installed with Android 7.0 or iOS 15.0 or above OS versions

Package Contents: Watch body, Watch strap, Charging puck, Instruction manual

Please refer to the watch user interface to see the software version.

Wi-Fi output power: <18 dBm

Bluetooth output power: <13 dBm

BLE output power: <9 dBm

Operating temperature: 0°C to 45°C

Water resistance rating: 10 ATM

Bluetooth frequency: 2402-2480 MHz



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Anhui Huami Information Technology Co., Ltd. is under license. Other trademarks and trade names are those of their respective owners.

## Battery Safety

1. This device is equipped with a built-in battery that cannot be removed or replaced. Do not disassemble or modify the battery by yourself.
2. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.

3. Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas.
4. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
5. Do not use power adapters or data cables that are not properly certified or incompatible, as this may damage the watch and accessories, or cause fire, explosion, or other hazards.

## Diving Safety

1. This device is only applicable to recreational free diving activities. The maximum depth at which it can function normally is 45 meters.
2. The free diving related features of this device can only be used by divers with relevant qualifications. Before using this device, make sure that you have received professional training and know how to use this device. When using free diving related features (including breath holding training and breath holding test), ordinary user should be accompanied by a coach, an experienced diving companion, or a professional.
3. Before using the device, you should be aware that any electronic device may malfunction, and this device may be unable to provide accurate data information in specific cases. Please carry a backup device as needed.
4. Free diving activities contain certain risks. Before using the device, make sure that your physical condition is suitable for such activities. Consult your doctor for advice if you have any questions.
5. To avoid the risks of decompression sickness, make sure that you have enough rest on the surface of the water. There should be sufficient surface intervals between scuba diving and free diving.

## Safety Notice

1. Do not allow children or pets to bite or swallow the product or its accessories, as this may cause injury.
2. Do not place this product under excessively high or low temperatures, which may cause the product to catch fire or explode.
3. Do not place this product near heat sources or open flame, such as ovens and electric heaters.
4. Some people may experience allergic skin reactions to plastics, leathers, fibers, and other materials, and symptoms such as redness, swelling, and inflammation will occur after long-term contact with this product's components. If you experience such symptoms, please discontinue use and consult your doctor.
5. Do not use power adapters or data cables that are not properly certified or incompatible, as this may damage the watch and accessories, or cause fire, explosion, or other hazards.
6. The radio waves generated by this product may affect the normal operation of implanted medical devices or personal medical devices, such as pacemakers and hearing aids. If you use any such medical devices, consult the manufacturer for relevant usage restrictions.
7. Do not dispose of this device or its accessories as ordinary household waste. Please make sure you dispose of or recycle this device and its accessories in accordance with local laws and regulations.

## Repair and Maintenance

1. Avoid using detergents such as soap, hand sanitizer, bath foam, or lotion for cleaning to prevent chemical residues from irritating the skin, corroding the device, or degrading the water resistance of the device.
2. After wearing the device while bathing (for devices that support bathing), swimming (for devices that support swimming), or sweating, please promptly clean and dry the device.
3. The leather strap is not waterproof. Avoid getting the strap wet, as this may shorten its service life.
4. When using light-colored watch straps, avoid contact with dark clothing to prevent staining.
5. The watch is not suitable for use in hot showers, hot springs, saunas (steam rooms), and similar scenarios.
6. Do not place the device in direct sunlight for long periods. Excessively high or low ambient temperature may cause device failure.
7. Handle with care during transportation. Keep the device dry and away from humidity.
8. Do not wear the watch in MRI examinations and other highly magnetic environments. Otherwise, the watch may be damaged.

## Warranty and Return Policy

The Amazfit Limited Warranty covers Amazfit products against manufacturing defects beginning on the original purchase date. The warranty period is 12 months or another specified period as the applicable consumer laws in the consumer's country of purchase require. Our warranty is in addition to rights provided by applicable consumer laws.

Official website: [www.amazfit.com](http://www.amazfit.com)

Please check the FAQ on the website for troubleshooting:  
[support.amazfit.com/en/product-list](http://support.amazfit.com/en/product-list)

### Notes:

- This product isn't a medical device. None of the data or measurements are intended for medical diagnosis or medical monitoring.
- If the product is not in use for a long period of time, it is recommended that you power off the product before storing it. Recharge the battery every 6 months to 100% to prevent battery damage by over-discharge due to long-term storage.
- For detailed operating instructions, safety precautions, and repair and maintenance information, please visit the website <https://support.amazfit.com> to download the user manual.